

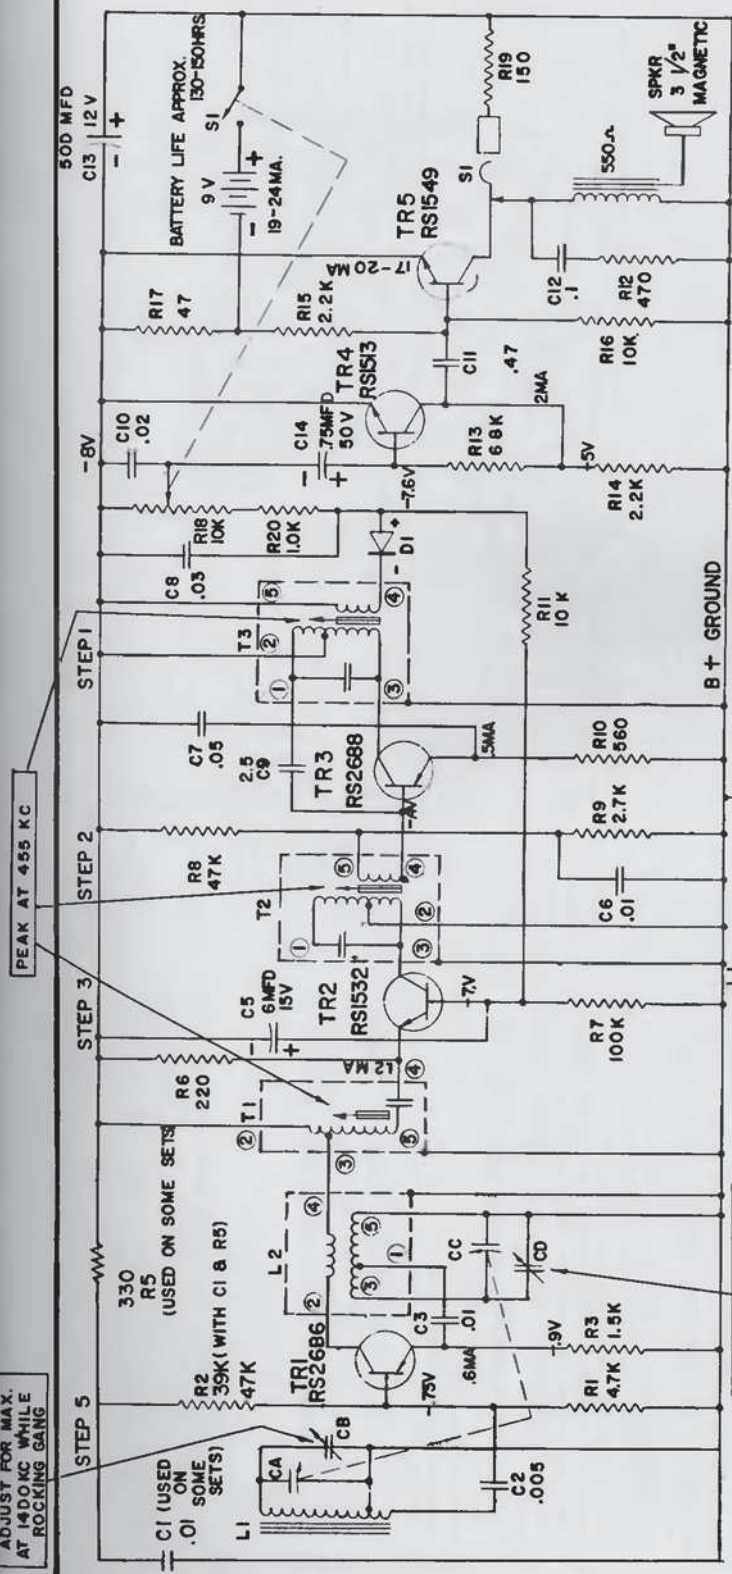


GENERAL ELECTRIC


Radio Models P807B and P808B
(See preceding page for A version)

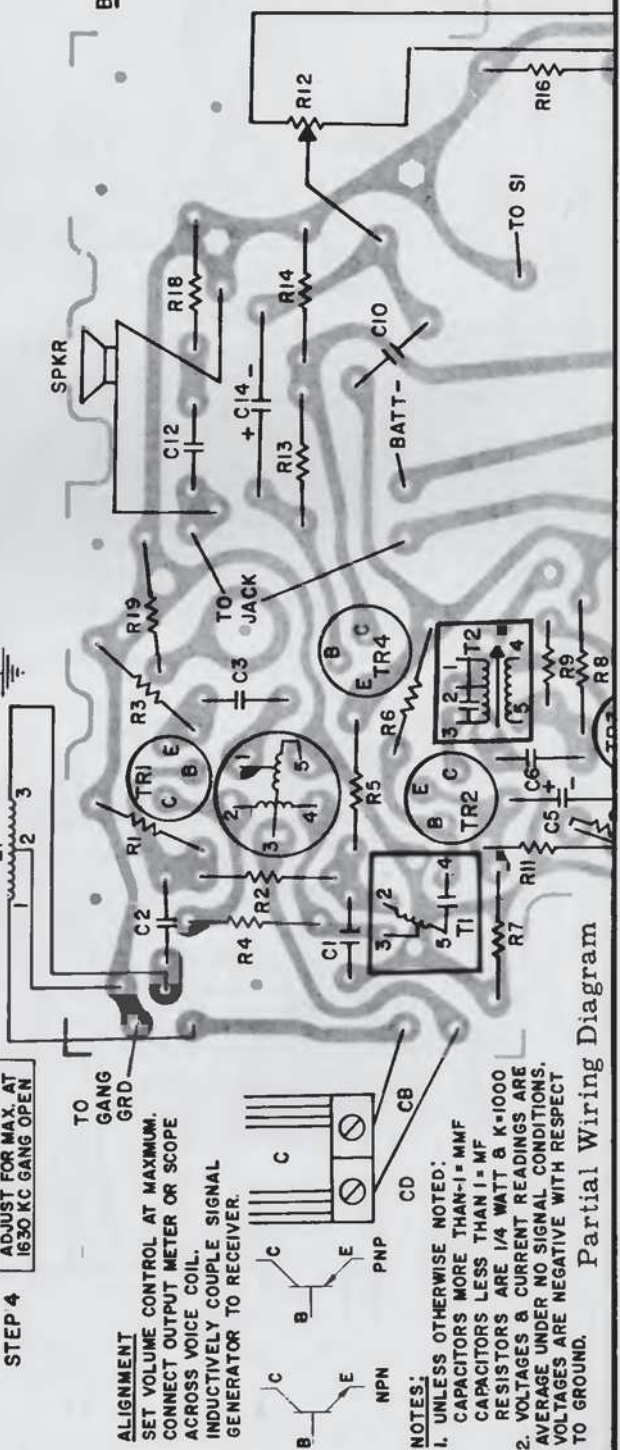

BOTTOM VIEWS

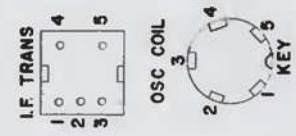

ALIGNMENT
SET VOLUME CONTROL AT MAXIMUM.
CONNECT OUTPUT METER OR SCOPE
ACROSS VOICE COIL.
INDUCTIVELY COUPLE SIGNAL
GENERATOR TO RECEIVER.

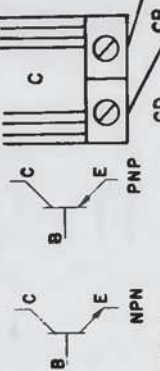

- NOTES:**
- UNLESS OTHERWISE NOTED:
CAPACITORS MORE THAN 1-10 MMF
CAPACITORS LESS THAN 1-10 MF
RESISTORS ARE 1/4 WATT & K-1000
VOLTAGES & CURRENT READINGS ARE
AVERAGE UNDER NO SIGNAL CONDITIONS.
VOLTAGES ARE NEGATIVE WITH RESPECT
TO GROUND.

Partial Wiring Diagram