


ソ ニ ー TR-712B

SONY TR-712B

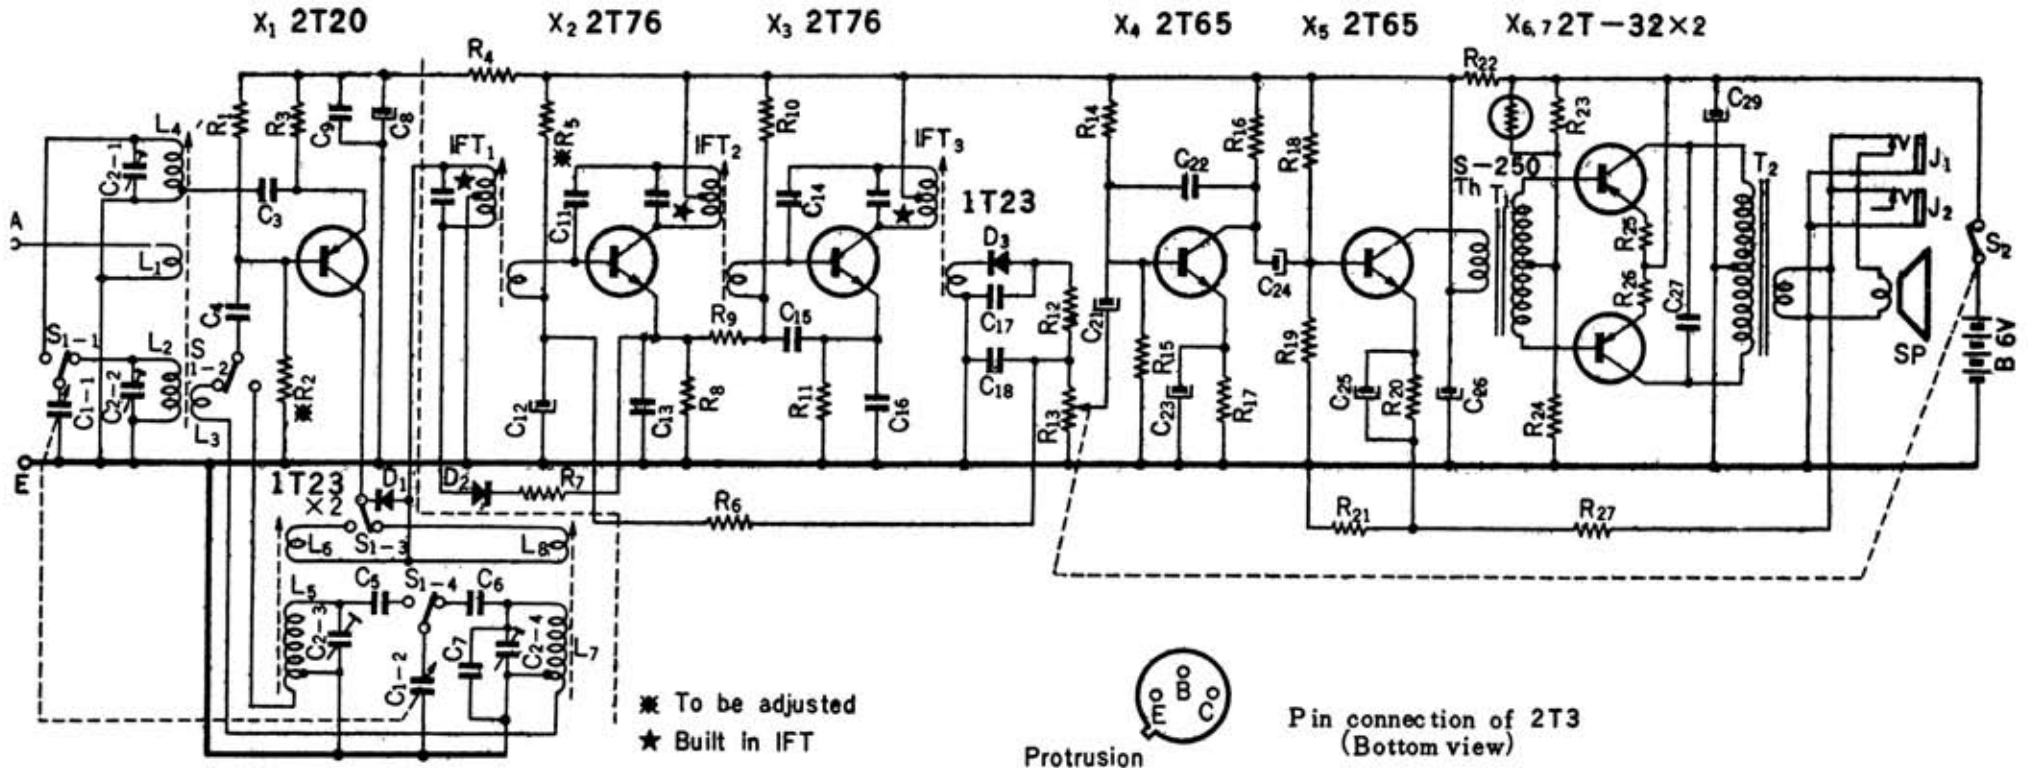

SONY TR-712B

Symbol	Description	Symbol	Description	Symbol	Description
L ₁	EXT. ANT. } (Ferrite	R ₄	2.2 K Ω	R ₁₆	1 K Ω
L ₂ L ₃	MW ANT. } bar	R ₅ ①	82 K Ω	R ₁₇	1 K Ω
L ₄	SW ANT. } antenna)	R ₆	5.6 K Ω	R ₁₈	7.5 K Ω
L ₅ L ₆	SW oscillator coil	R ₇	470 Ω	R ₁₉	3.3 K Ω
L ₇ L ₈	MW " "	R ₈	470 Ω	R ₂₀	470 Ω
IFT ₁	LI-020 AP	R ₉	3.3 K Ω	R ₂₁	5.1 Ω
IFT ₂	LI-008 BP	R ₁₀	27 K Ω	R ₂₂	100 Ω
IFT ₃	LI-008 CP	R ₁₁	470 Ω	R ₂₃	220 Ω
S ₁	Power switch	R ₁₂	470 Ω	R ₂₄	4.7 K Ω
S ₂	Input transformer	R ₁₃ ②	5 K Ω	R ₂₅	5.1 Ω
T ₁	Output transformer	R ₁₄	18 K Ω	R ₂₆	5.1 Ω
T ₂	Earphone jack	R ₁₅	5.6 K Ω	R ₂₇	100 Ω
J ₁	" "				
J ₂	" "				
SP	5" 8 Ω				
X ₁	Mix. 2T20 (2SA122)				
X ₂	IF ₁ 2T76 (2SC76)				
X ₃	IF ₂ 2T76 (2SC76)				
X ₄	AF ₁ 2T65 (2SD65)				
X ₅	AF ₂ 2T65 (2SD65)				
X ₆	A Font 2T32 (2SB52)				
X ₇	A Font 2T32 (2SB52)				
D ₁	OSC comp. 1T23				
D ₂	AGC 1T23				
D ₃	DET 1T23				
Th	Thermistor S-250				
C ₁	2 ganged variable condenser				
C ₂	4 ganged trimmer condenser				
C ₃	0.005 μ F				
C ₄	0.01 μ F				
C ₅	3000 PF (Styrol)				
C ₆	370 PF (")				
C ₇	10 PF (")				
C ₈	100 μ F 6 V (Electrolytic)				
C ₉	0.01 μ F				
C ₁₁	2 PF (Styrol)				
C ₁₂	10 μ F 3 V (Electrolytic)				
C ₁₃	0.02 μ F				
C ₁₄	2 PF (Styrol)				
C ₁₅	0.02 μ F				
C ₁₆	0.02 μ F				
C ₁₇	0.02 μ F				
C ₁₈	0.02 μ F				
C ₂₁	10 μ F 3 V (Electrolytic)				
C ₂₂	0.005 μ F				
C ₂₃	30 μ F 3 V (Electrolytic)				
C ₂₄	10 μ F 3 V (")				
C ₂₅	30 μ F 3 V (")				
C ₂₆	100 μ F 6 V (")				
C ₂₇	0.1 μ F				
C ₂₉	100 μ F 6 V (Electrolytic)				
R ₁	3.3 K Ω				
R ₄ ①	12 K Ω				
R ₅	2.2 K Ω				

① To be adjusted ② Volume control with switch